



## Scottoil: Triumph Bonneville and Thruxton 865Fi (2008 - on) Scottoil vSystem Installation Guide

Note: The HCR (sold separately) is not compatible with this model, we recommend the [Lube Tube](#) instead



Locate the vacuum – There is a rubber bung over a spigot on the throttle body. Remove this bung and then press the Damper Elbow, part number 4, onto the spigot. For further information see our easy step installation guide - [Vacuum Connections, General](#).

Note: Connecting into any other vacuum point on this model can cause running problems. There is no vacuum on idle using this vacuum connection so you must open the throttle slightly when setting the flow rate.

See picture below left



Note: Looking from Left Hand Side of bike

The RMV can be mounted to the frame. The more vertical the RMV the better and remember to avoid exhaust and engine components. For further information, see our easy step installation guide – [Resvoir Positions, General](#).

See third picture



The delivery tubing can be routed along the swingarm using conduit and glue or self adhesive cable clips and the dispenser can be secured on the rear spindle using a Dispenser plate & Clip. For further information see our easy step installation guide - [Dispenser Assemblies, General](#). The nib should feed the rear sprocket between the 6 & 7 o'clock positions, with the cut face outwards.

See picture bottom left



Once fitted, [fill and prime](#) the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoil using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoil to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email [technical@scottoiler.com](mailto:technical@scottoiler.com) for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 [www.scottoiler.com](http://www.scottoiler.com)

